

Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual



Type 8506 wedge-screw grips (manual), Fmax 150 kN



CTA: 43071 40058

- Specimen material Metals, plastics
- Specimen shape
 Round and flat specimens
- Type of loading Tensile

Function description

A handwheel is used to open and close the wedge screw grips, as well as apply closing force before the test. Switchable synchronization allows the grips to be set both symmetrically and asymmetrically.

The gripping force is generated via wedge action. The gripping force is proportional to the tensile force. The ratio is determined via the wedge angle.

A slot for the insertion of the T-slotted system is incorporated into this specimen grip type.

These specimen grips are also available in motorized versions.



Type 8507 wedge-screw grips (manual), Fmax 250 kN

Advantages and features

- Switchable synchronization enables symmetrical and asymmetrical specimen testing.
- Fast and easy insertion of specimen is enabled due to the ergonomic and open design.
- The jaws can be be changed quickly and easily without tools if the application changes. The jaws are thus automatically centered.
- The specimen grip can be easily operated in the temperature chamber and quickly reaches its test temperature due to its low mass.
- accurate test results combined with a high number of cycles due to the adjustable centering stops for flat specimens
- You save time, by quickly and easily adapting small specimen grips and test tools to large specimen grips via the T-slotted system. Precise alignment ensures reliable test results.




Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual

Technical data


Type 8406 8506 8507 Operating principle/identification Mechanical opening/closing Test load F _{max} 50 100 150 250 Dimensions Fleight 146 176 176 252 Width 385 371 416 522 Depth 115 115 140 158 Depth with stop strip 135 135 159 - Gripping area 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	kN mm mm
Test load F _{max} 50 100 150 250 Dimensions .	mm
Dimensions Height 146 176 176 252 Width 385 371 416 522 Depth 115 115 140 158 Depth with stop strip 135 135 159 - Gripping area Feight 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	mm
Height 146 176 176 252 Width 385 371 416 522 Depth 115 115 140 158 Depth with stop strip 135 135 159 - Gripping area Fleight 80 80 80 100/120 Width 60 60 60 80 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	
Width 385 371 416 522 Depth 115 115 140 158 Depth with stop strip 135 135 159 - Gripping area Fleight 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	
Depth 115 115 140 158 Depth with stop strip 135 135 159 - Gripping area - - - Height 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	mm
Depth with stop strip 135 135 159 - Gripping area - - - Height 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	
Gripping area Height 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions 8 8 8 8	mm
Height 80 80 80 100/120 Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 8 Specimen dimensions	mm
Width 60 60 60 80 Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	
Gripping of the specimen The specimen must be gripped with at least 1/2 of the jaw height. Gripping travel 8 8 8 8 Specimen dimensions	mm
Gripping travel 8 8 8 8 Specimen dimensions	mm
Specimen dimensions	
	mm
Flat specimen, thickness 0 42 0 42 0 42 0 64	mm
Round specimen, Ø 4 30 4 30 4 30	mm
Weight per specimen grip, approx. 37 44 49 108	kg
Connection, stud Ø 36 Ø 60 Ø 60	mm
Ambient temperature -55 +250 ²⁾ -55 +250 ²⁾ -55 +250 ²⁾ -55 +250 ²⁾	°C
Scope of delivery 2 2 2 2	piece(s)

¹⁾ Recommended and approved for strain rate control to standards DIN EN ISO 6892-1:2009 and ASTM E8-09

²⁾ The temperature range may be limited by a smaller jaw temperature range.

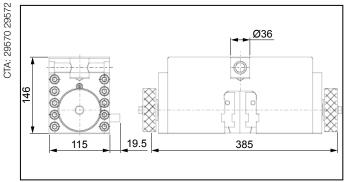


Type 8406 wedge screw grips (manual), Fmax 50 kN: general view

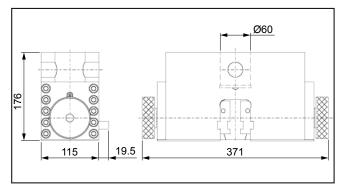


Type 8506 wedge screw grips (manual), Fmax 100 kN: general view



Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual

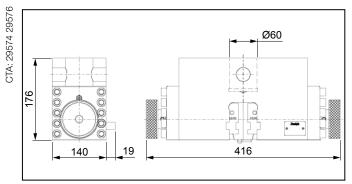



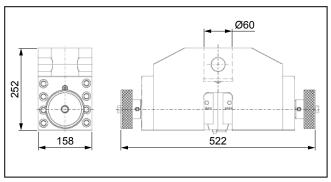

Type 8507 wedge screw grips (manual), Fmax 250 kN: general view

Accessories required

Flat jaws for type 8406 / 8506

Application	Version	Specimer sions	n dimen-	Gripping	area	Ambient temper-	Hard- ness	Item No.
		Flat speci- men, thick- ness [mm]	Round speci- men, Ø [mm]	Height [mm]	Width [mm]	ature [°C]		
Metal, wood, fiber- reinforced plastics	Steel, fsc ¹⁾ 0.4	0 42	1 4	80	60	-70 +250	61 HRC	316903
Metal, wood, fiber- reinforced plastics	Steel, fsc ¹⁾ 0.75	0 42	2 4	80	60	-70 +250	61 HRC	316905
Metal, wood, fiber- reinforced plastics	Steel, fsc ¹⁾ 1.25	0 42	-	80	60	-70 +250	61 HRC	316907
Clamp-sensitive material	Steel, diamond- coated	030	0 13	80	60	-15 +80	-	317388
High-strength wires, glass fiber-reinforced plastics, carbon fiber materials	Hard metal, Pr ²⁾ 0.7 mm	0 13	1 8	45	30	-40 +250	1250 HV	317392 ³⁾
Hard metals	Hard metal, Pr ²⁾ 0.7 mm	0 13	1 8	70	34	-70 +250	1250 HV	318643 ⁴⁾

¹⁾ Fsc = fish scale

²⁾ Pr = pyramid grid

³⁾ Required: Jaw mounting Pr 0.7 mm, gripping area 45 x 30 mm

⁴⁾ Required: Jaw mounting



Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual

Prism jaws for type 8406/8506 (1x required)

Scope of delivery: 1 set (= 4 pieces)

Application	Version	Specimen dimensions Round specimen, Ø [mm]	Gripping area Length [mm]	Ambient tempera- ture [°C]	Hardness	Item No.
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	4 10	80 ²⁾	-70 + 250	61 HRC	316913
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	10 30	80 ²⁾	-70 +250	61 HRC	316915

¹⁾ St= saw tooth

Jaw mounting for type 8406 / 8506

Description	Item number
Jaw mounting for hard metal jaws, Pr 0.7 mm, 45 x 30 mm (1 set = 4 pieces) ¹⁾	317390
Jaw mounting for hard metal jaws, Pr 0.7 mm, incl. centering stops, 70 x 34 mm (1 set = 4 pieces)	318645

¹⁾ F_{max} 50 kN

Flat jaws for type 8507

- 1x required (alternatively 1x prism jaws)
- Scope of delivery. 1 set (= 4 pieces)

Application	Version	Specimen dimensions	Gripping are	a	Ambient tempera-	Hard- ness	Item No.
		Flat speci- men, thick- ness [mm]	Height [mm]	Width [mm]	ture [°C]		
Metal, wood, fiber-rein- forced plastics	Steel, fsc ¹⁾ 0.4	0 64	100	80	-70 +250	61 HRC	318602
Metal, wood, fiber-rein- forced plastics	Steel, fsc ¹⁾ 0.75	0 64	100	80	-70 +250	61 HRC	318604
Metal, wood, fiber-rein- forced plastics	Steel, fsc ¹⁾ 1.25	0 64	100	80	-70 +250	61 HRC	318606
Clamp-sensitive material	Steel, dia- mond-coated	0 64	100	80	-70 +250	-	318608
Hard metals	Hard metal, Pr ²⁾ 0.7 mm	0 48	80	50	-70 +250	1250 HV	320034 3)

¹⁾ Fsc = fish scale

²⁾ Prism jaws (with V-slot), thus the clamping length is specified here

²⁾ Pr = pyramid grid



Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual

3) Required: Jaw mounting

Prism jaws (with V-groove) for type 8507

- 1x required (alternatively 1x flat jaws)
- Scope of delivery: 1 set (= 4 pieces)

Application	Version	Specimen dimensions Round specimen, Ø [mm]	Gripping area Length [mm]	Ambient tempera- ture [°C]	Hardness	Item No.
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	4 10	100 ²⁾	-70 +250	61 HRC	318610
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	10 30	100 ²⁾	-70 +250	61 HRC	318612
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	30 60	100 ²⁾	-70 +250	61 HRC	318614
Round specimens: Metal, wood, fiber-rein- forced plastics	Steel, St ¹⁾ 1.5	40 80	120 ²⁾	-70 +250	61 HRC	318616
Round specimens: Hard metals	Hard metal, Pr ³⁾ 0.7 mm	4 10/10 30	80 ²⁾	-70 +250	1250 HV	325572 4)5)

¹⁾ St= saw tooth

Jaw mounting for type 8507

Description	Item number
Jaw mounting for hard metal jaws, Pr 0.7 mm, incl. centering stops	320036
Jaw mounting for hard metal jaws, Pr 0.7 mm, for round specimens	325573

Optional accessories

Connectors Type 8406 / Type 8506

Description	Item number
T-slotted shoe-connector with Connectors with M28 x 1.5 thread for connecting Ø8, 20, 36 mm mounting studs or load cells, centering spigot, Ø 30 H7, for connecting mounting unit, mounting flange or Ø 60 mm mounting stud 2 pieces	320252
T-slotted shoe connector for load cell calibration, Fmax 100 kN, with hole \emptyset 64/48 mm, included in delivery: 2 pieces	029093

²⁾ Prism jaws (with V-slot), thus the clamping length is specified here

³⁾ Pr = pyramid grid

⁴⁾ Scope of delivery: 8 pieces

⁵⁾ Required: Jaw mounting



Wedge screw grips Type 8406 Fmax 50 kN, Type 8506 Fmax 100 kN, 150 kN and Type 8507 Fmax 250 kN, manual

Connectors type 8507

Description	Item number
Connectors with M28x1.5 thread for connecting \emptyset 8, 20, 36 mm mounting studs or load cells, centering gauge, \emptyset 30 H7, for connecting mounting unit, mounting flange or \emptyset 60 mm mounting stud. Scope of delivery: 2 pieces	318600
Mounting stud, \emptyset 60 mm only used with connectors. For connecting additional accessories. Scope of delivery: 1 piece	314062

Mounting unit and mounting flange Type 8406 / Type 8506 / Type 8507

Description	Item number
Mounting unit for connecting flexure tables, upper anvil holders and compression test kits	314058
Mounting flange (Fmax 250 kN) for connecting flexure tables.	314060